



i-Test Quick Start Guide

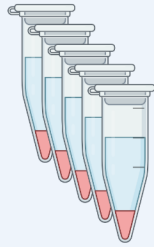



1. Tap to settle the reaction mix



Or

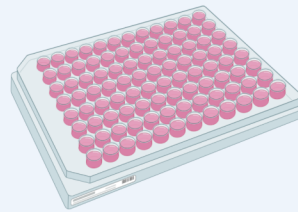

2. Sample leaf

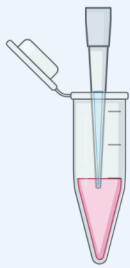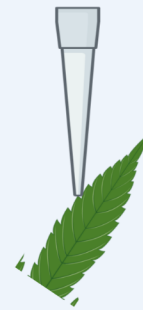


3. Insert tip into the solution in the desired tube and mix for 10 seconds





4. Cap tubes or seal plates

5. Incubate on sand in oven, incubator, or food dehydrator at 63°C for 30-45 minutes

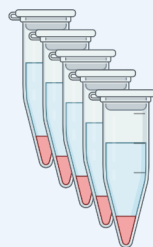

Or

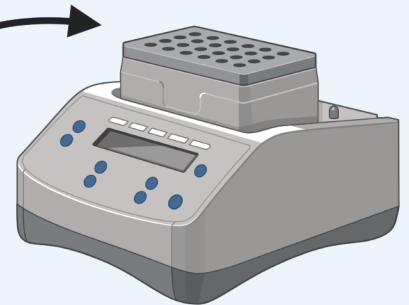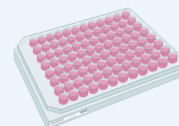

Copyrighted © 2022 , all rights reserved.

Notes: